

附表一： LD668 遙控器指撥碼對照表－1

□：OFF： ★：ON

車位	PIN	1	2	3	4	5	6	7	8	車位	PIN	1	2	3	4	5	6	7	8
1		★	★	★	★	★	★	★	★	65		★	★	★	★	★		★	★
2			★	★	★	★	★	★	★	66			★	★	★	★		★	★
3		★		★	★	★	★	★	★	67		★		★	★	★		★	★
4				★	★	★	★	★	★	68				★	★	★		★	★
5		★	★		★	★	★	★	★	69		★	★		★	★		★	★
6			★		★	★	★	★	★	70			★		★	★		★	★
7		★			★	★	★	★	★	71		★			★	★		★	★
8					★	★	★	★	★	72					★	★		★	★
9		★	★	★		★	★	★	★	73		★	★	★		★		★	★
10			★	★		★	★	★	★	74			★	★		★		★	★
11		★		★		★	★	★	★	75		★		★		★		★	★
12				★		★	★	★	★	76				★		★		★	★
13		★	★			★	★	★	★	77		★	★			★		★	★
14			★			★	★	★	★	78			★			★		★	★
15		★				★	★	★	★	79		★				★		★	★
16						★	★	★	★	80						★		★	★
17		★	★	★	★	★	★	★		81		★	★	★	★	★		★	
18			★	★	★	★	★	★		82			★	★	★	★		★	
19		★		★	★	★	★	★		83		★		★	★	★		★	
20				★	★	★	★	★		84				★	★	★		★	
21		★	★		★	★	★	★		85		★	★		★	★		★	
22			★		★	★	★	★		86			★		★	★		★	
23		★			★	★	★	★		87		★			★	★		★	
24					★	★	★	★		88					★	★		★	
25		★	★	★		★	★	★		89		★	★	★		★		★	
26			★	★		★	★	★		90			★	★		★		★	
27		★		★		★	★	★		91		★		★		★		★	
28				★		★	★	★		92				★		★		★	
29		★	★			★	★	★		93		★	★			★		★	
30			★			★	★	★		94			★			★		★	
31		★				★	★	★		95		★				★		★	
32						★	★	★		96						★		★	
33		★	★	★	★	★	★		★	97		★	★	★	★	★			★
34			★	★	★	★	★		★	98			★	★	★	★			★
35		★		★	★	★	★		★	99		★		★	★	★			★
36				★	★	★	★		★	100				★	★	★			★
37		★	★		★	★	★		★	101		★	★		★	★			★
38			★		★	★	★		★	102			★		★	★			★
39		★			★	★	★		★	103		★			★	★			★
40					★	★	★		★	104					★	★			★
41		★	★	★		★	★		★	105		★	★	★		★			★
42			★	★		★	★		★	106			★	★		★			★
43		★		★		★	★		★	107		★		★		★			★
44				★		★	★		★	108				★		★			★
45		★	★			★	★		★	109		★	★			★			★
46			★			★	★		★	110			★			★			★
47		★				★	★		★	111		★				★			★
48						★	★		★	112						★			★
49		★	★	★	★	★	★			113		★	★	★	★	★			
50			★	★	★	★	★			114			★	★	★	★			
51		★		★	★	★	★			115		★		★	★	★			
52				★	★	★	★			116				★	★	★			
53		★	★		★	★	★			117		★	★		★	★			
54			★		★	★	★			118			★		★	★			
55		★			★	★	★			119		★			★	★			
56					★	★	★			120					★	★			
57		★	★	★		★	★			121		★	★	★		★			
58			★	★		★	★			122			★	★		★			
59		★		★		★	★			123		★		★		★			
60				★		★	★			124				★		★			
61		★	★			★	★			125		★	★			★			
62			★			★	★			126			★			★			
63		★				★	★			127		★				★			
64						★	★			128						★			

附表三 故障碼顯示二進制編碼方式如下： ★：NO □：OFF

故障碼	ID1	ID2	ID3	ID4
0000	★	★	★	★
0101		★	★	★
0202	★		★	★
0303			★	★
0404	★	★		★
0505		★		★
0606	★			★
0707				★
0808	★	★	★	
0909		★	★	
1010	★		★	
1111			★	
1212	★	★		
1313		★		
1414	★			
1515				

共 15 個故障碼

《出廠前主機區域設定為 CC16 區》

- ※數位主機、區域碼設定方式 【出廠密碼、設為 6565】
- ※首先由按密碼 6565 →按 999 進入→按輸入→顯示 1.2.3.4. → 按 3 → 輸入，選擇管理者功能 3 模式時，→畫面顯示 CC16 →接下來看要設定為那區，直接按區域號碼→再按輸入即可。

曆達實業有限公司：網址 www.pled.tw
曆達實業有限公司：網址 www.leader-park.com.tw
曆達實業有限公司：Email：ld@pled.tw
曆達實業有限公司：服務熱線：02-2695-9090 傳真號碼：02-2695-1567